





FRONT VIEW - OPERATIONAL HEIGHT

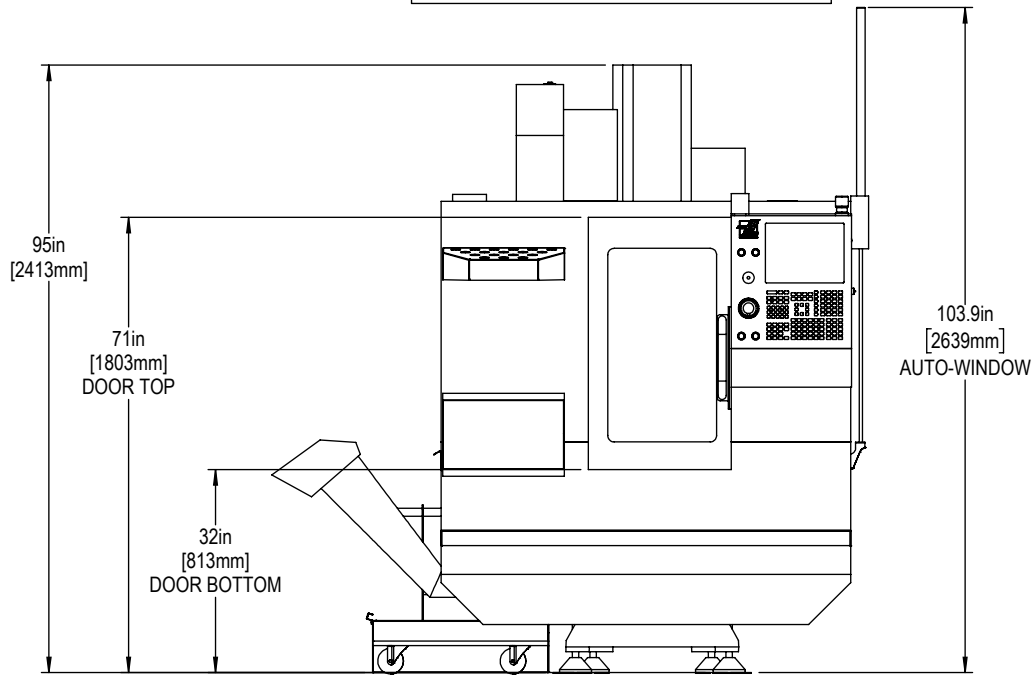


REFER TO THE INSTALLATION INSTRUCTIONS FOR STEP BY STEP GUIDANCE

TOP VIEW - OPERATIONAL DEPTH AND WIDTH

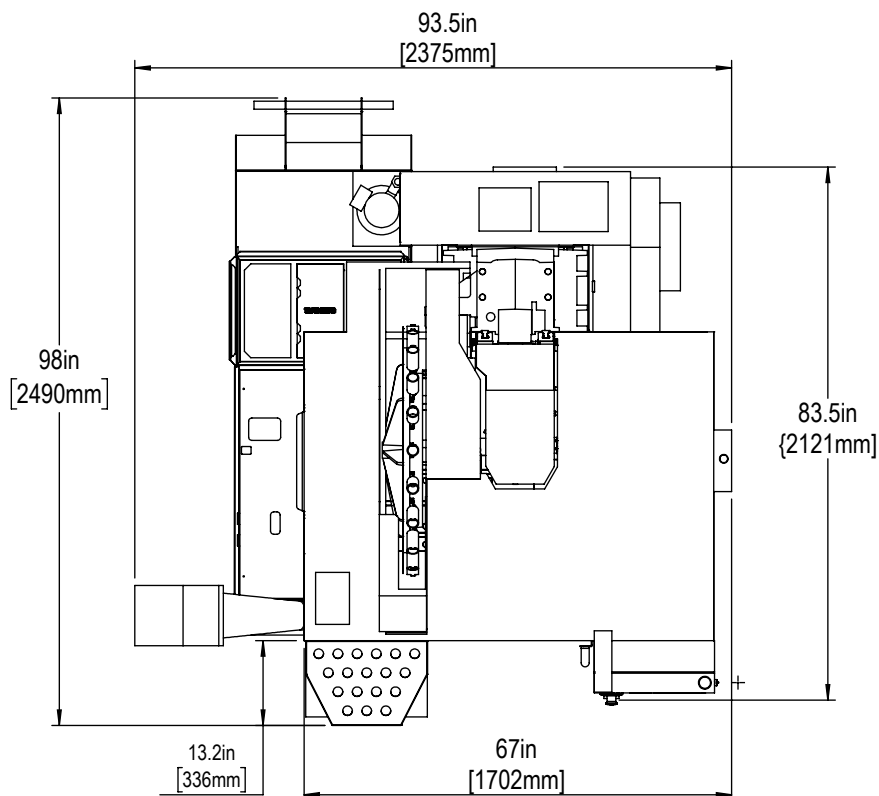



FRONT VIEW

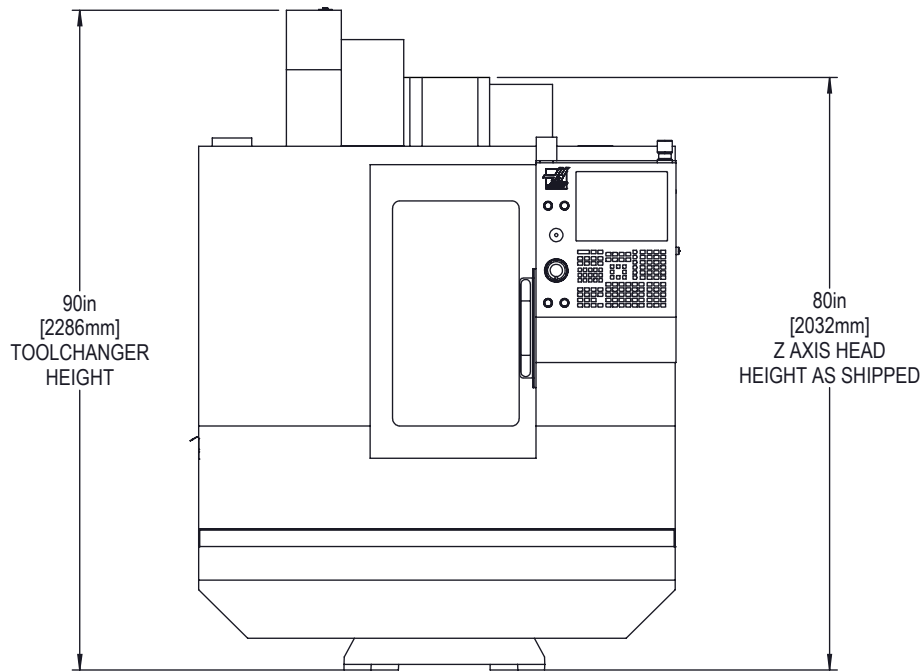

DIMENSIONS ARE FROM THE BOTTOM OF THE BASE

MACHINE SHOWN WITHOUT ANY LEVELING SCREWS, PADS AND SHIPPING MATERIALS

TOP VIEW


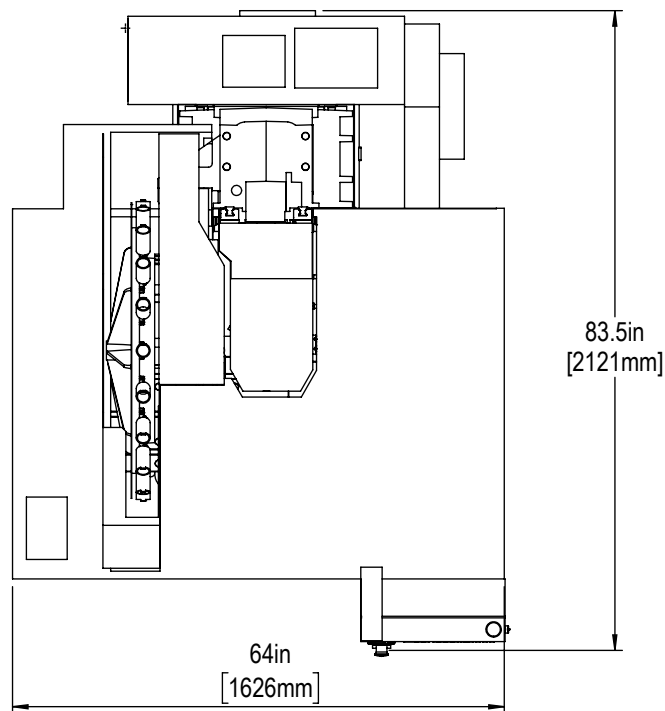


IMAGE SHOWN AS SHIPPED (NO COOLANT TANK) TO SHOW THE SMALLEST DEPTH




HEIGHT BREAKDOWNS

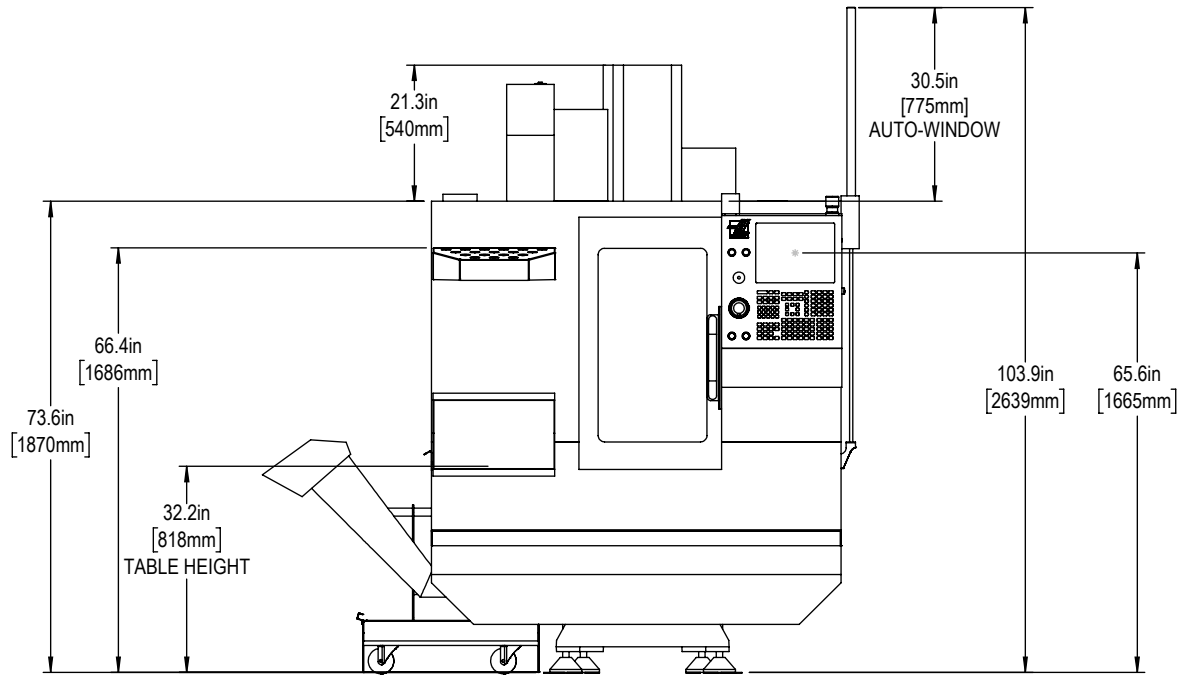


DEPTH AND WIDTH BREAKDOWNS

DRAWINGS NOT TO SCALE

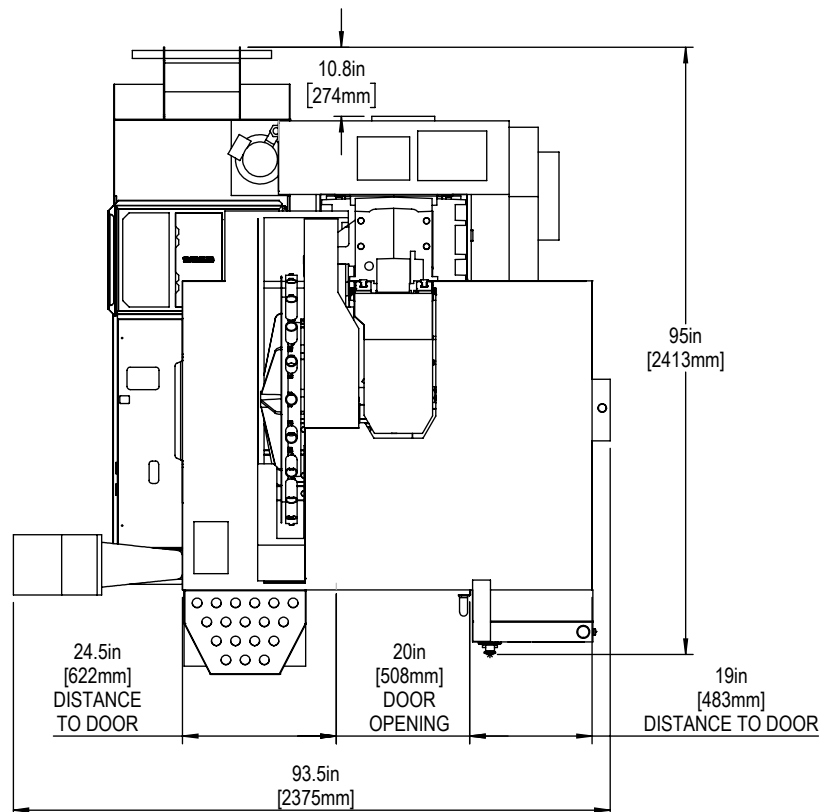




BACK VIEW

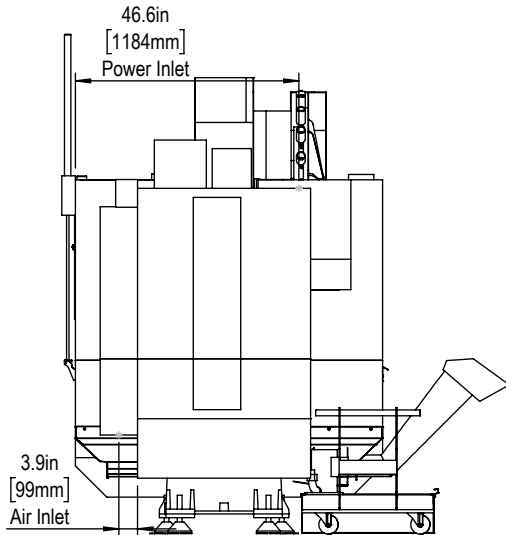

RIGHT SIDE VIEW

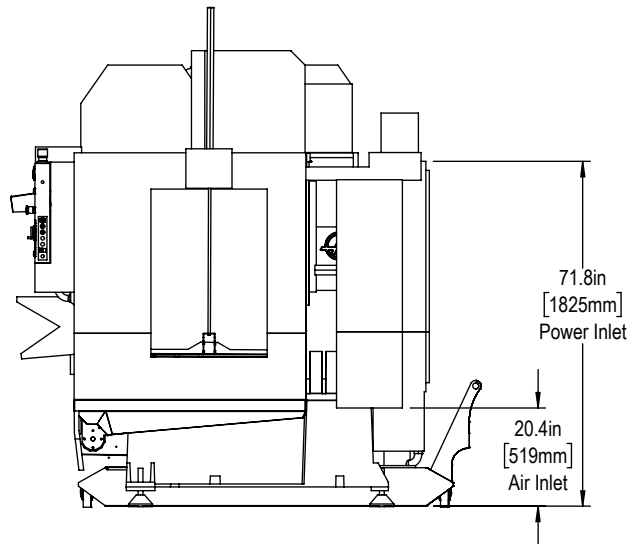


REFER TO MACHINE INSTALLATION INSTRUCTIONS FOR DETAILS

A 36in [914mm] CLEARANCE IS REQUIRED FOR ELECTRICAL CABINET

NOTE: MACHINE MUST BE PLACED ON ONE CONTINUOUS CONCRETE SLAB.  
SLAB SHOULD EXTEND 12in [305mm] BEYOND ANCHOR HOLES IN ALL DIRECTIONS


ANCHOR HOLE  
DETAILS:  
Ø 0.62in [16mm]  
▽ 2in [51mm]  
▽ 2.25in [57mm]

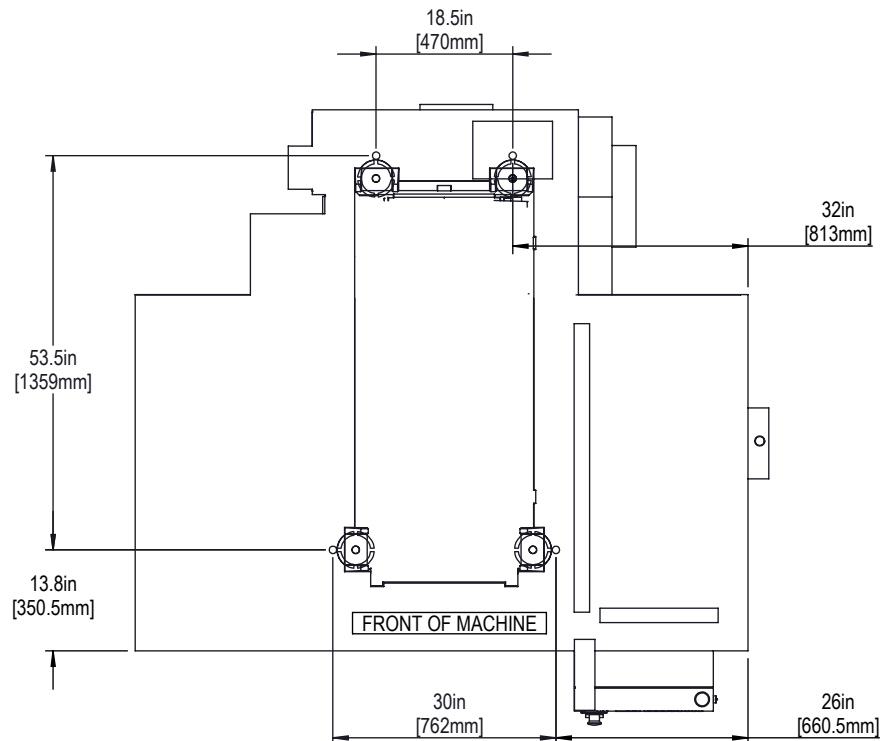

FOR PRECISE DRILLING LOCATIONS PLEASE USE THE TEMPLATE FROM THE MACHINE ANCHORING KIT




X AND Y AXIS TRAVELS

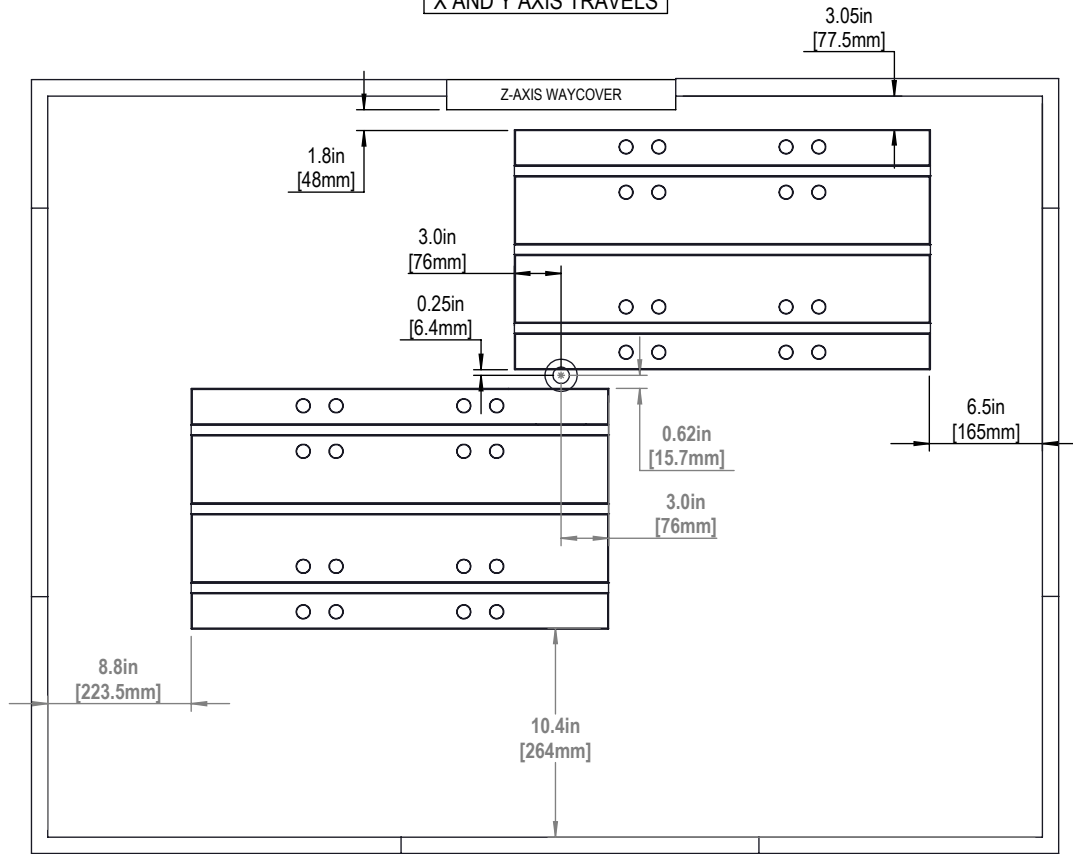

SKETCHES NOT TO SCALE


Z AXIS TRAVELS

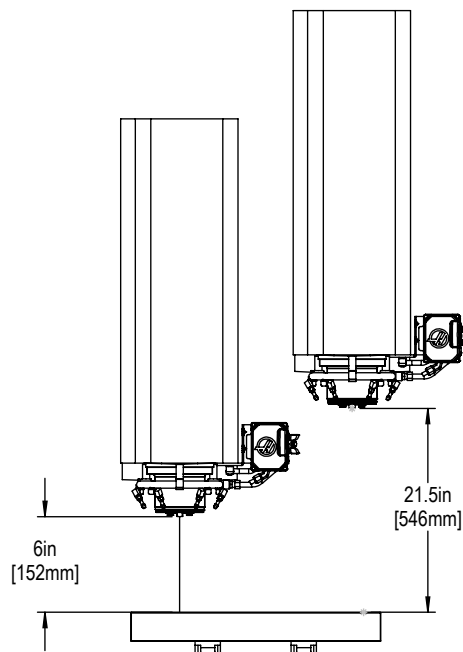


MACHINE TABLE FRONT VIEW



TABLE

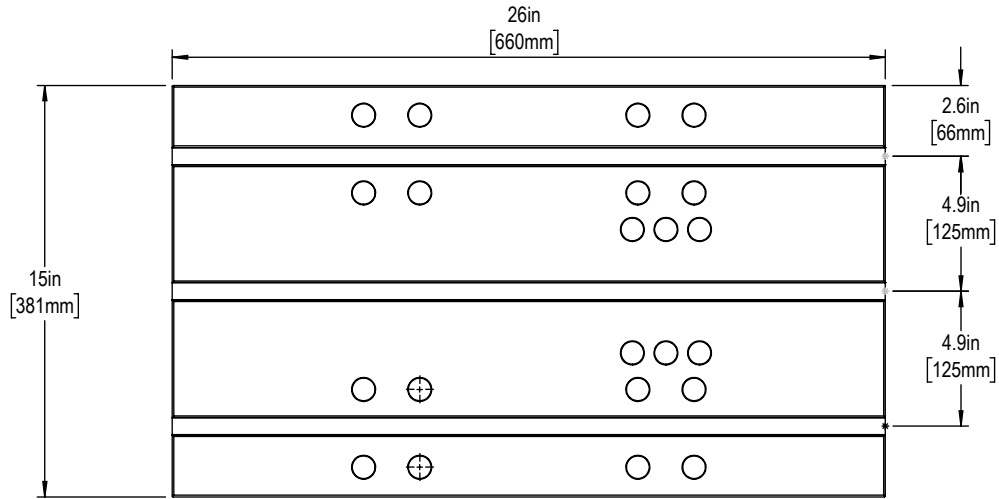

Slot Size	A	B	C	D
16mm	0.628in	1.06in	0.64in	0.42in
16mm	16mm	27mm	16mm	10.5mm

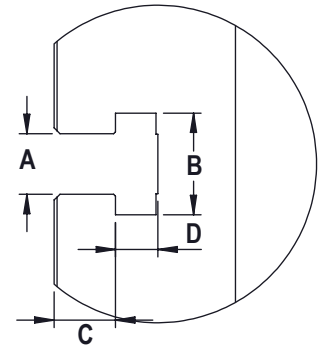

TOOL CHANGER

